




SAFewood
DESIGNS

BALLISTIC RESISTANT

LAMINATE WALL PANELS

Installation Guide

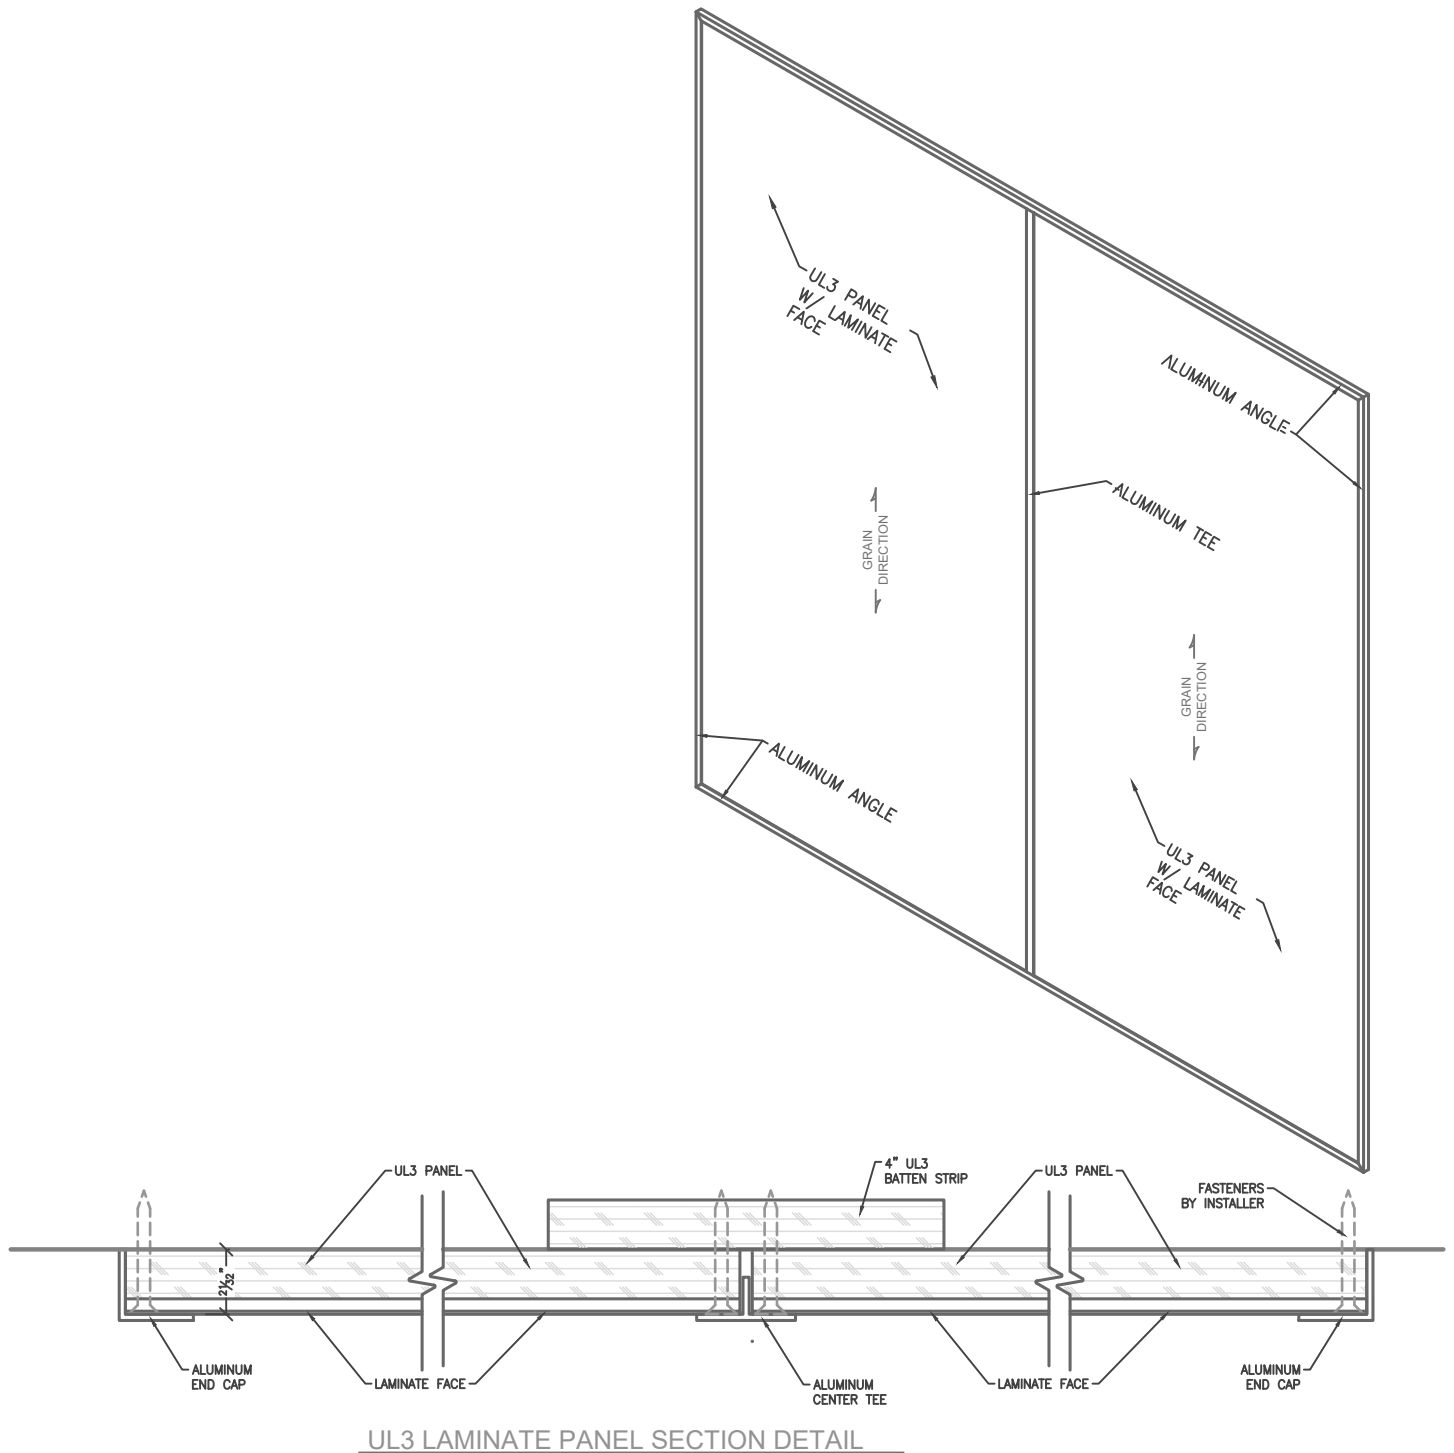

UL3 LAMINATE PANEL SECTION DETAIL

Installation

Cut using ordinary carpentry tools. We suggest using a carbide grit or diamond edge saw blade. Install using self-tapping dry wall screws. Pre-drilling may be required with a carbide or masonry bit. Recommend using 4" overlap strips behind all seams, outlets, switches, and/or light fixtures.